



# REVERSING THE DOOR OPENING SIDE

To change the direction the door opens, proceed as indicated:


1. Unscrew the two door hinges (A and B);
2. Invert the upper hinge (A);
3. Install the door;
4. Invert the second hinge and attach the door.

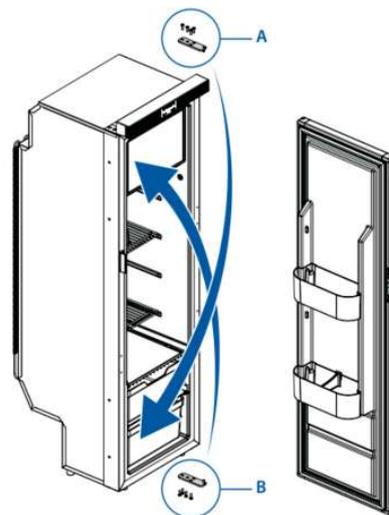


5. Move the refrigerator closure from one side to the other;

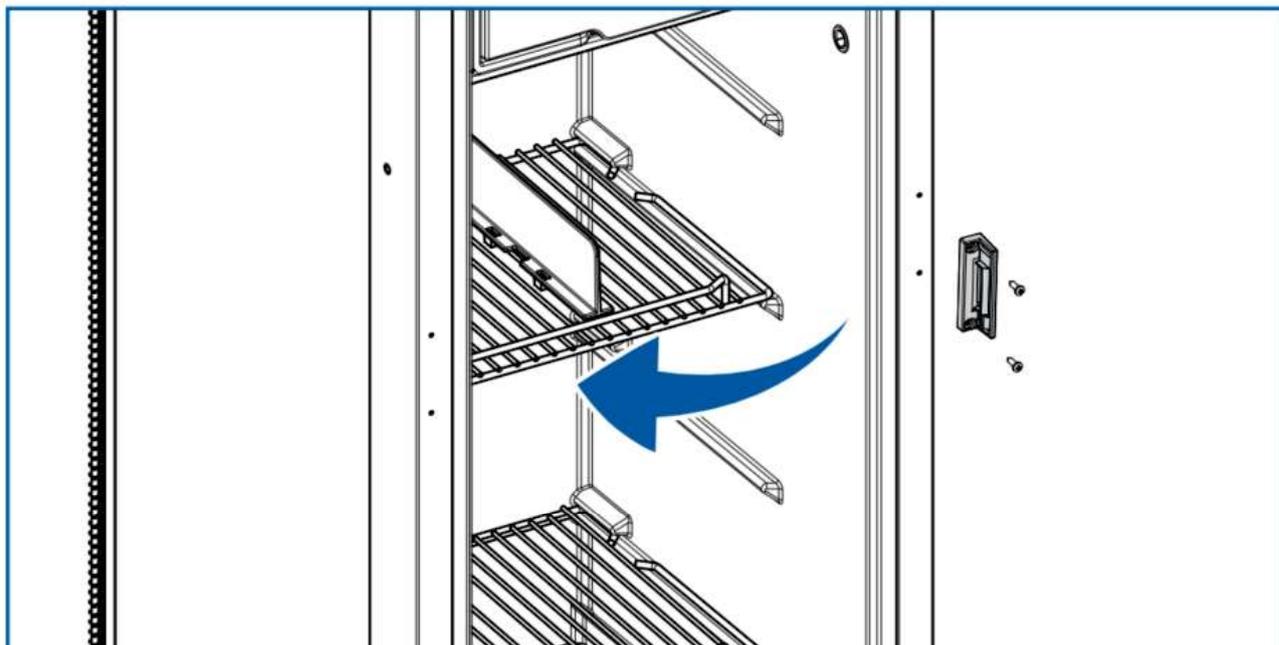


6. Move the handle from one side of the door to the other. To remove it, press lightly on the internal handle pin with a screwdriver (see figure), To replace it, lower the two internal pins and wedge it in its housing;

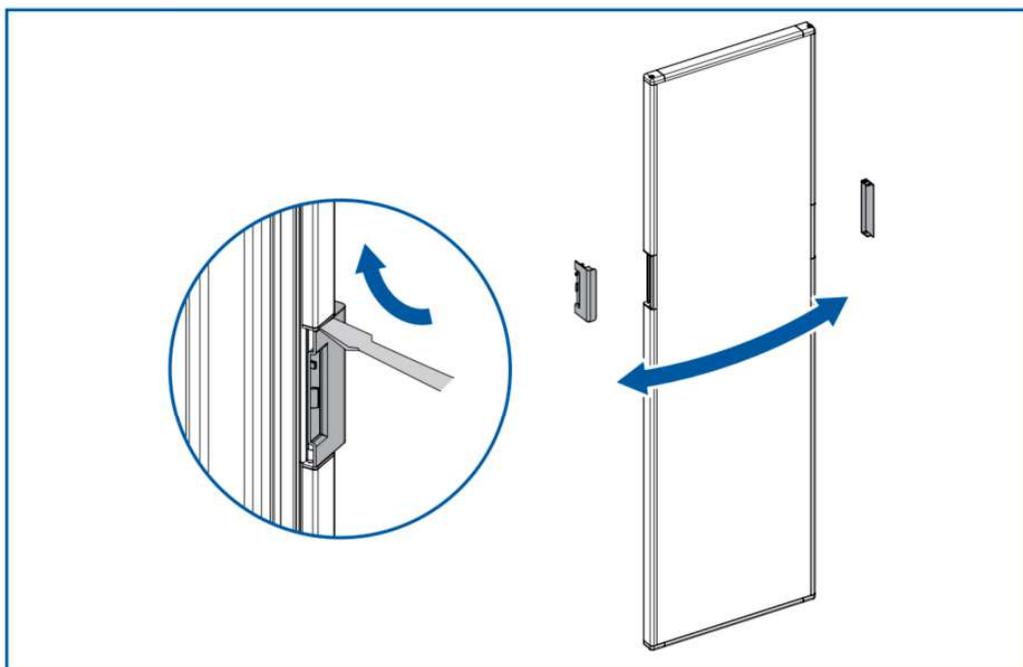


7. Remove the SmartTray;

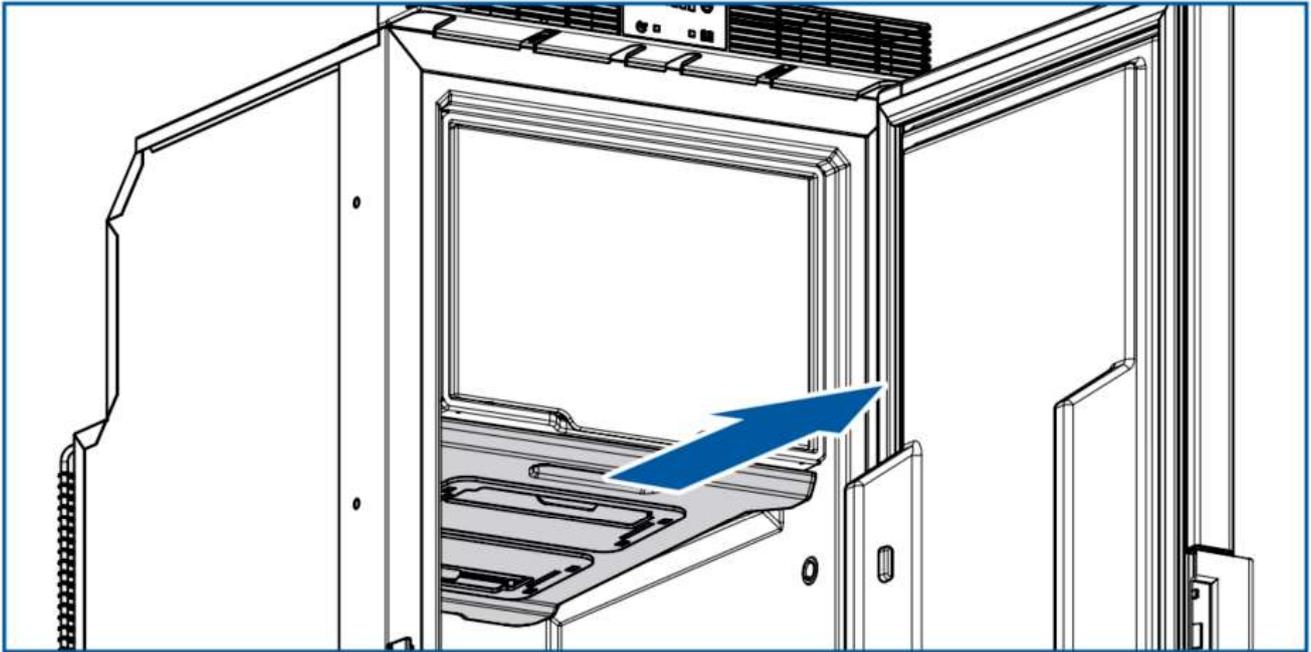


8. Remove the freezer compartment mounting screws;

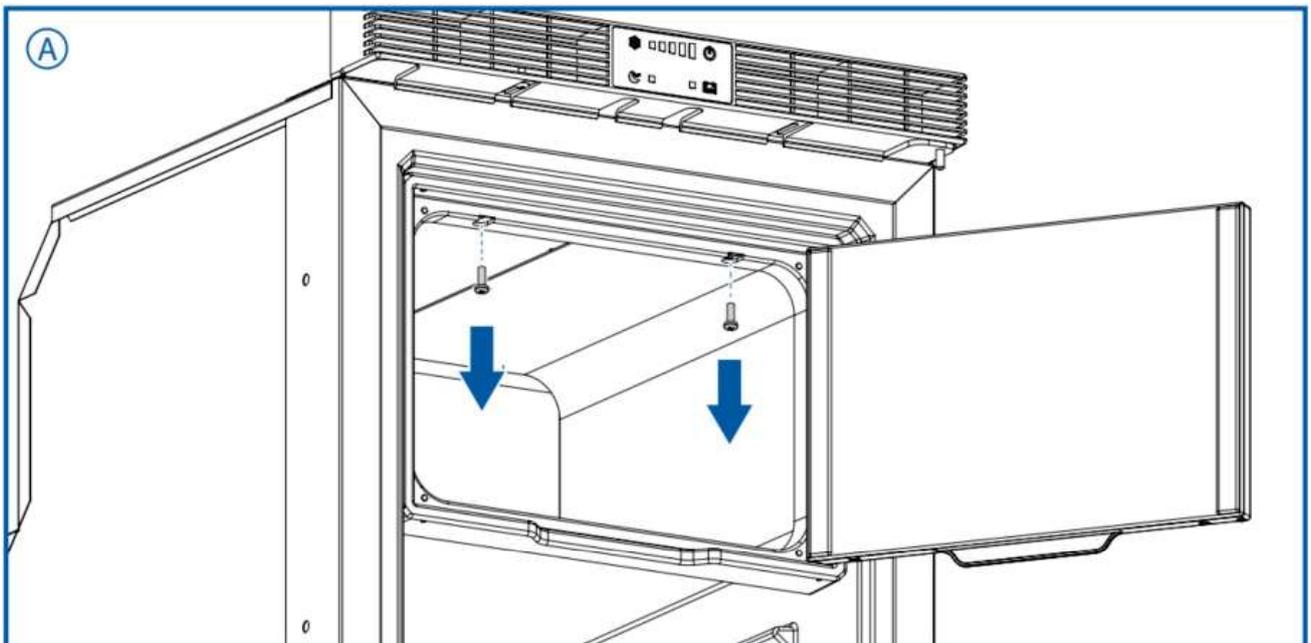


9. Partially remove the freezer compartment and remove the door by pulling out its pin, using a slight pressure from the lower hole and sliding it from the upper hole (as shown in the figure);

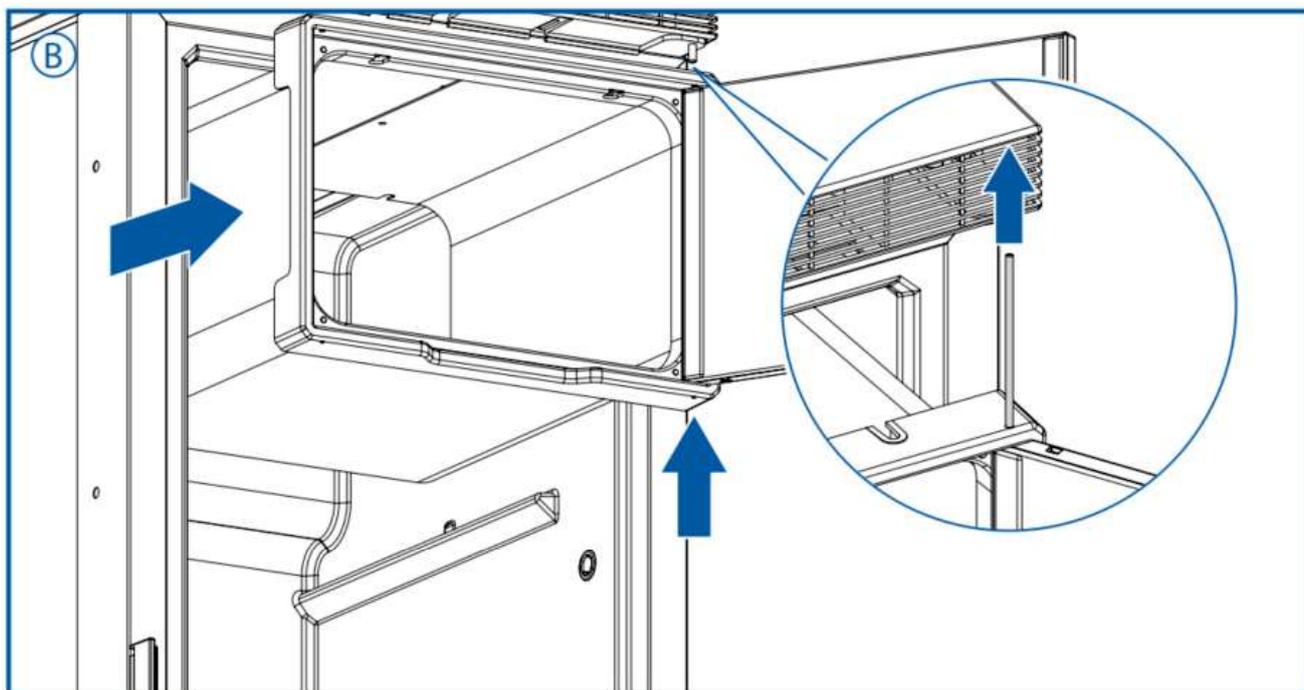

10. Detach the inner door panel from the door (as shown in figure) and remove it.

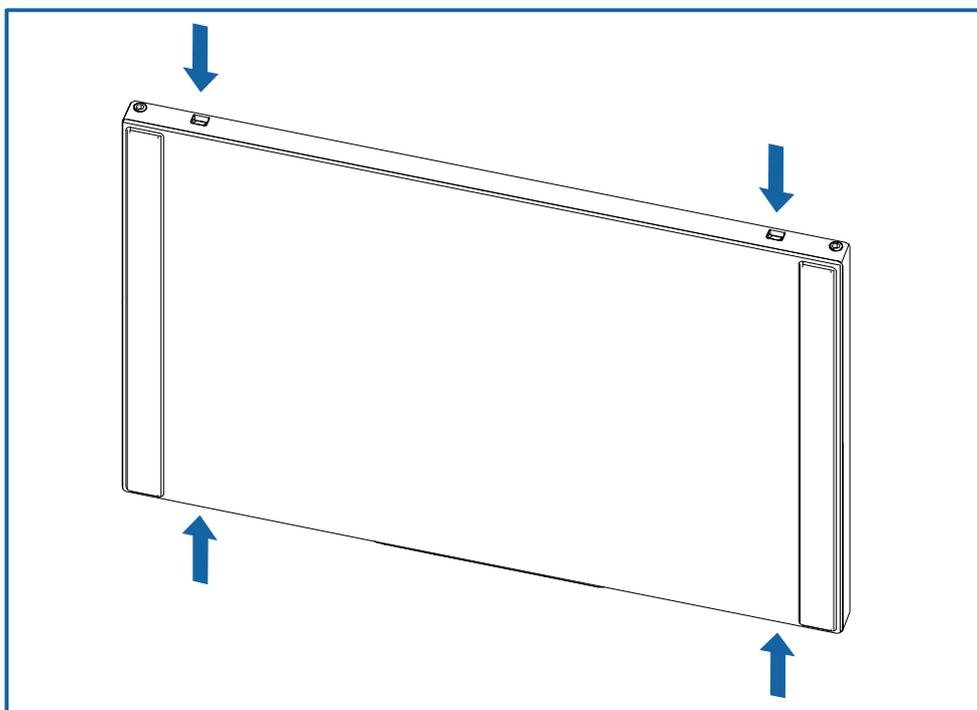

11. Turn the polystyrene panel with the magnet around horizontally.

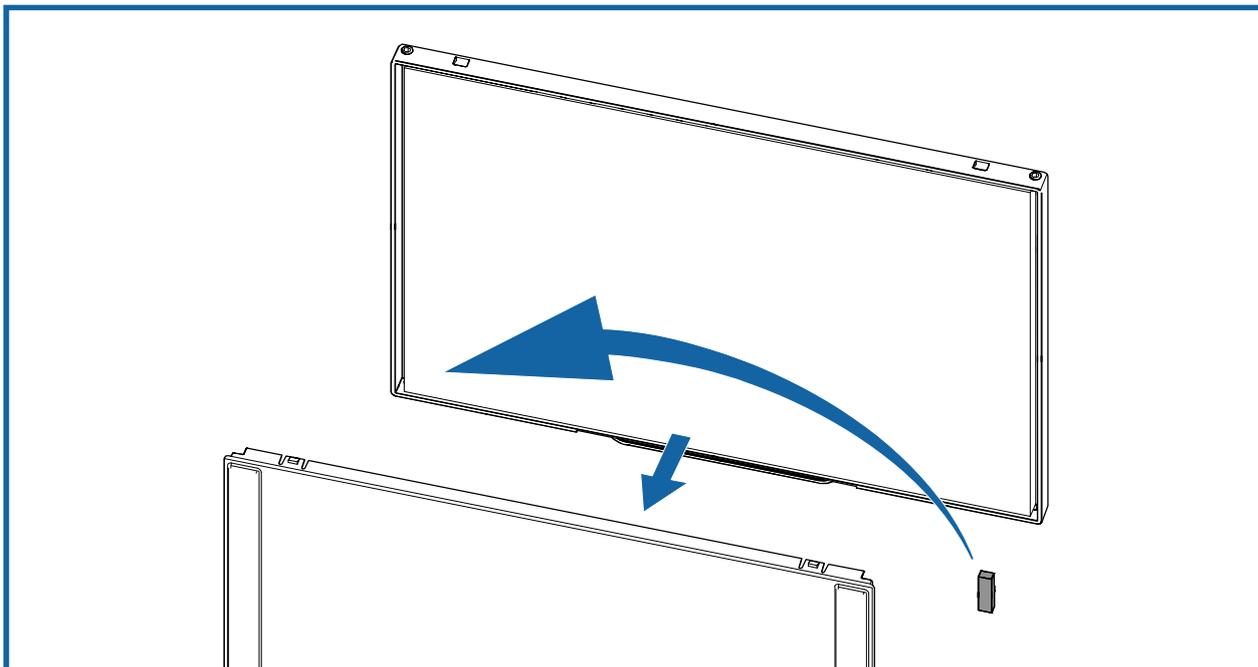

12. Replace the door in the same manner on the other side.

